

Manual Konnect 560 CINEPIX

danew
14 rue de la Périnie,
95420 Villepinte, FRANCE
www.danew.com

Thanks for using Danew Konnect 560 which will bring you high-quality entertainment.

Instruction manual

- User manual describes various features of this product, usage and precautions.
- In order to ensure your safety and use the product correctly, please read the user's manual carefully before using your mobile phone.
- In order to ensure your safety and use the product correctly, please read the user's manual carefully before using your mobile phone.
- The user's manual is based on the default settings for this product.
- Available features and additional services may vary depending on the provider, service and usage.
- Use the phone to send and receive information, upload and download, automatic synchronization or location services and other functions may generate additional costs, in order to avoid additional costs, please select the data charges plan. More information, please contact the service provider.
- Procedures and functions may vary by region or hardware specifications. Danew is not responsible for the performance problems caused by the third party application.
- This user manual is updated in March 11, 2016.
- Please keep it properly for future reference.

Copyright

Copyright 2016 Danew
This manual is protected by international copyright law.
Without Danew written permission shall not be reproduced, distributed, transferred or transmitted in any form or manner (electronic or mechanical), including copying, recording, or storing in any storage and retrieval system.

Description	Function
Fingerprint sensor + Home key	• Homepage: You can return to the homepage by press this key in any application or interface. • Fingerprint unlock: The phone screen can be awakened from screen off status.
Menu	• Press this button to open a list of actions that you can perform in the current interface or options menu.
Return	• Press this key to return to the previous interface, or to close the dialog box, the options menu, the notification bar, etc.
Power key	• Boot-Up state: Short press to standby. Press 3 seconds to put out the shutdown menu; press 10 seconds to reset. • Ready mode: Short press to wake up the screen. • Shutdown mode: Press 3 seconds to boot.
Volume key	• To increase or decrease the volume, the phone can be transferred to the vibration state from mute state by press this key. • Focusing
Focusing	• The sliding roller can set the focus of the projection in order to achieve the best clear effect.

To Charge The Battery

Prompt

- User can charge the battery to be charged by the original charger or our approved accessories. The mobile phone is with a non-removable built-in battery, you can replace the battery only by the company authorized professional service center. Do not disassemble the battery yourself.
- The battery can be charged repeatedly, but the battery is consumption good. If there's a significant reduction in the standby time of the phone, not replace the battery yourself, please contact the company's authorized professional service center.
- The phone should be charged before the first use, you can charge the phone by charger or through the USB data cable to connect the device to the computer to charge the battery.
- The phone will gradually discharge if it's long-term unused. Before normal use, the phone have to be recharged.
- If the battery is exhausted, the phone may not be able to boot immediately when you just plug in the charger, this is a normal phenomenon. Please continue to charge for some time, and then boot it normally.
- For the new or long-term unused battery, we suggest that you charge the battery. When the charge is completed, please unplug the charging and charging data line in time.
- The new battery or long-term unused battery needs to be fully charged and discharged after several times in order to achieve its best state.

Method of using the charger

In order to improve the charging efficiency and ensure the safety of charging, please use 220V alternating current. Connect the charger and data line to the power outlet and the mobile phone's charging port. Please do not allow the charging data line to be damaged or affected. Connect the charging data line to the phone charging identification for charging. When the charge is completed, please unplug the charger and charging data line in time. In order to avoid the danger of electric shock, please unplug it from the power source before cleaning the charger. For safety, do not use the charger in the outdoor or damp environment.

3.WLAN

WLAN provides a furthest 300 feet (100M) wireless network access. To use WLAN on your phone, you must connect to a wireless access point or "hot spot".

Quick Guide

1.Project

When you need to share the video, pictures, documents in the phone, you can open the projection, it will bring more fun.

2.Video Phone

Video phone is a communication mode based on internet and mobile internet to transfer voice and image user's best, photos, items, etc.) by phones in real-time. Enter a number to click on the video dial, the other side picks up the phone and then they can make a video call through the camera.

3.Conference Call

Also known as two-way call / conference call, this function requires SIM card to be opened with conference call function.

The phone is with the one-way call function already.

Click "add call", dial a one-way call again (or pick up an incoming call, the mobile phone enabled by default "call waiting" (settings - call settings - voice call - other settings), when the two-way calls is established, you can view the status on the call interface.

When dialing and incoming calls, the projection will be automatically closed, after the end of the call, you need to manually open the projection to continue to use.

In the open projection state, the projection will be unstable when the phone battery power is less than 15%, it's caused by insufficient power, so the user is required to charge in time to ensure adequate power.

2.Remote Control Wizard

The phone supports the remote control function of TV, TV box, air conditioner, DVD, audio and other infrared receiving equipment. You don't need to worry about the trouble caused by forgetting the home appliance remote control. It can replace almost all household appliances remote control, so that life becomes more comfortable and convenient.

3.WLAN

WLAN provides a furthest 300 feet (100M) wireless network access. To use WLAN on your phone, you must connect to a wireless access point or "hot spot".

Key point: Messages take the number of the other side for title, and be saved in the form of a chat record "conversation", rather than the usual folder structure. The message received would be displayed on the left side of the dialog, and the message sent would be displayed on the right side of the dialog.

Send MMS to other numbers: The newly created message is SMS, the user can select or upload pictures, sound, text etc. and edit, when edit is finished, the message would be automatically turned to MMS, and then you can click "send" to send.

Selecting the option to use as a USB storage device can open the right options.

You can view camera pictures directly in the PC side when it's connected.

Message group sending to multiple numbers: You can input multiple numbers into the input box directly, each number should be separated by comma in English. Click the icon on the right side of the recipient, you can choose the contacts from the contact list for group sending.

7.Browser

Click the browser icon and enter the start page of the browser. Click on the web thumbnail image or input the website you want to access in the address bar (such as www.danew.com) and click the start button on the keyboard.

To open a new browser window, click on the blank page to display the menu, please click the tab window icon on the menu, click the plus icon and then input the URL.

To switch to a new browser window, click on the blank page to display the menu, please click tab window icon on the menu, select the window you want to switch to.

Browser settings

General settings, including homepage settings and other functions.

Privacy and security, including the removal of historical records, to clear the cache and other functions.

Auxiliary functions, including text size, point press to scaling and other functions.

Bandwidth management, to load the pictures or not when enter the web page.

8.Using the Phone Storage as U Flash Disk

To transfer music, photos, and other files from your computer to your memory card, you have to set the phone storage card to U flash disk first.

Selecting the "USB connected" option can load the U flash disk and store music, photos, and other files into your memory card or the built-in memory card.

Selecting the option to use as a USB storage device can open the right options.

You can view camera pictures directly in the PC side when it's connected.

Set Your Mobile Phone

1.Wireless & network

SIM card management
Menu options for selecting or disabling SIM card 1 or SIM card 2, the status bar will display flight mode when the SIM card is disabled. Dual card of the phone supports Mobile, Unicom, Telecom, and supports dual 4G function, but the dual 4G function can not work at the same time.

WLAN switch and settings
Touch the WLAN icon, it will automatically search for the available network, when wireless connection password can be directly connected and network via password and wireless password input. Open the WLAN and then open the offline mode, WLAN will be automatically shut down; Open flight mode to connect WLAN, WLAN can be used normally.

Bluetooth switch and settings
Touch the Bluetooth icon, enabled devices nearby, the Bluetooth will automatically switch on.

Mobile traffic usage
To monitor the mobile traffic and set the mobile data traffic restrictions, the mobile data services will be automatically shut down when the mobile traffic exceeds the limit.

Flight mode
Touch to turn on/off the flight mode. The related services of mobile network are banned after the offline mode is opened.

Network sharing and available hot spots
You can share the network by 3G/4G data line. Bluetooth and the establishment of WLAN hot spot. To click this option, you can set the name of the WLAN shared network, password, etc.

Mobile network
Enter the mobile network settings interface, including: a Data roaming, b Access point name, c Network operators.

GPRS data priority mode
Checked by default, phone priority. When you use the GPRS Internet, the phone can be in normal use.

2.Equipment

3.Personal

1) Access location information

Profiles
The phone provides you ringing settings for a phone call, notification, etc., including vibration, volume, ring tones, notification ring tones, and feedback (press the button, select, screen lock, touch), so as to adapt to the user's environment.

Display

Brightness: Adjust the screen brightness.
Wallpaper: You can set your mobile wallpaper from wallpaper gallery, gallery program or live wallpaper gallery.

Auto Rotate Screen: Rotate the direction of mobile phone.

Hibernation: Adjust the delay before the screen is automatically locked.

Font size: Set the font size of the system.

Storage

You can view the use of TF card and mobile phone storage.

Backup

Backup my data:
Can be used for data backup and restore the factory settings.

Notice: Backup your personal data before restore factory settings so as not to cause damage.

4.System

1: Date and time:
Automatically or manually confirm the time, time zone, and set the time format.

2: Time setting:
Set the time to a specific time or / off time, you can also choose the timing switch onset time, repeat or a week of a certain day.

3: Auxiliary function:
Large font: Displayed by large font.

Press the "power" button to end the call. When you make a call, press the "power" button to end the call rather than close the screen.

Speak the password:
Touch and hold delay.
Install web script.

Fast boot: Closed / open fast boot function.

4: About mobile phones:
To update the system wireless, view model, version and other information.

Applications

Management application: Applications to manage and remove other installed applications.

Running service: Click the "stop" to running service, confirming that the service is gone from the "running service" list.

Mobile Phone Application Notice

Your phone is a product with excellent design and process, and should be used carefully. The following advice can help you to follow the usage rules and protect the service life of your mobile phone.

Android keyboard setting:
Voice search:
GPS satellite positioning:
Open and close the GPS satellite positioning.

4) Backup & Restore

Backup my data:
Can be used for data backup and restore the factory settings.

Notice: Backup your personal data before restore factory settings so as not to cause damage.

5: System

1: Date and time:
Automatically or manually confirm the time, time zone, and set the time format.

2: Time setting:
Set the time to a specific time or / off time, you can also choose the timing switch onset time, repeat or a week of a certain day.

3: Auxiliary function:
Large font: Displayed by large font.

Press the "power" button to end the call. When you make a call, press the "power" button to end the call rather than close the screen.

Speak the password:
Touch and hold delay.
Install web script.

Fast boot: Closed / open fast boot function.

4: About mobile phones:
To update the system wireless, view model, version and other information.

Applications

Management application: Applications to manage and remove other installed applications.

Running service: Click the "stop" to running service, confirming that the service is gone from the "running service" list.

Environment-Friendly Instructions

Name and content of toxic substances or elements in the product

Part Name	(Pb)	(Hg)	(Cd)	(Cr(VI))	(PBB)	(PbB)
Phone shell	○	○	○	○	○	○
PCBA	○	○	○	○	○	○
Components	○	○	○	○	○	○
LED screen	○	○	○	○	○	○
Camera	○	○	○	○	○	○
Charger	×	○	○	○	○	○
Data cable	○	○	○	○	○	○

Part Name (Pb) (Hg) (Cd) (Cr(VI)) (PBB) (PbB)

Phone shell ○ ○ ○ ○ ○ ○